LAVATHERM 58810

Condensation dryer

User information

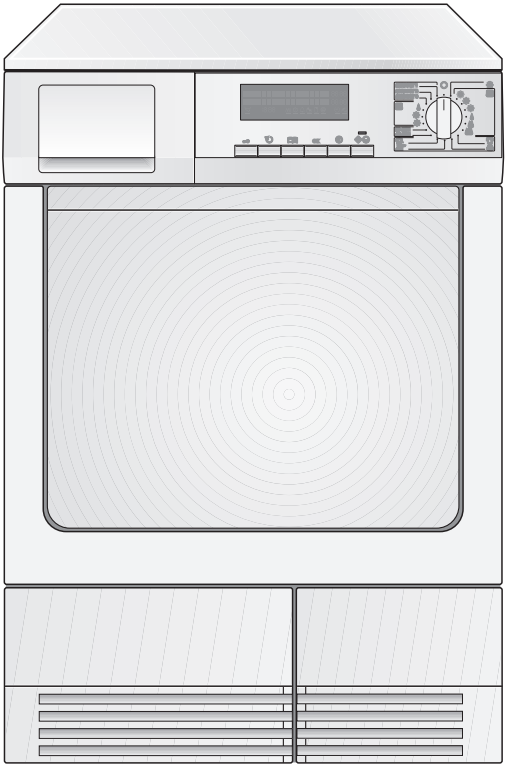

Dear customer,

Please read this User Information carefully and keep it to refer to at a later date.
Pass this User Information on to any subsequent owner of the appliance.

The following symbols are used in the text:

Safety instructions
Warning: Notes that concern your personal safety.
Attention: Notes that show how to avoid damage to the appliance.

Useful tips and hints

Environmental information

Contents

Operating Instructions 5

Safety 5

Disposal 6

Environmental tips 7

Description of machine 8

Control panel 8
What is shown in the display 8

Prior to using for the first time 9
Switching on the appliance for the first time - setting the language 9
Setting the time 9

Programme overview 10

Before the first drying cycle 12

Sorting and preparing laundry 12

Drying 13
Switching machine on / switching light on 13
Opening loading door / filling laundry 13
Selecting the programme 13
Setting the pre-drainage spin speed 13
Setting options 14
- Half Power, Buzzer, Sensitive 14
- Dry Level 15
- Delay Start Timer 16
- Long Anticrease 16

Starting the programme 17
Programme progress 17
Changing a programme 17
Putting in extra items or taking items out before end of programme 17
Drying cycle complete / removing washing 18

Setup 18
Memory 1, 2, 3 18
Sound 20
Water hardness 20
Language 21
Clock 21
Contrast and Brightness 22
Condensate tank indicator 22

Cleaning and maintenance 23
Cleaning fluff filter 23
Cleaning the door seal 24
Emptying the condensed water container 25
Cleaning the heat exchanger 26
Cleaning the drum 27
Clean operating screen and housing 27

What to do if... 27
Remedying small malfunctions 27
Changing bulb for inside light 29

Technical data 30

Consumption values 30

Installation and connection instructions 31

Installation safety instructions 31

Removing transport safety equipment 31

Electrical connection 32

Changing door stop 32

Special accessories 34

Guarantee/Customer Service 35

Service 39

⚠ Safety

Before first starting up

- Note the **"Installation and connection instructions"**
- Before first starting up, check the machine for any damage incurred during transport. Never connect up a damaged machine. If parts are damaged, contact your supplier.

Intended use

- The dryer is intended for drying standard laundry in domestic applications.
- Conversions or modifications to the dryer are not permitted.
- The laundry must not contain flammable solvents (benzene, alcohol, stain remover, etc.) . Risk of fire and/or explosion! Laundry which has come into contact with such substances must be rinsed thoroughly by hand before drying.
- When using dry-cleaning sets: Only use those products which are declared as suitable for the dryer by the manufacturer.
- Do not place items of laundry in the dryer which contain foam rubber or materials similar to rubber. Risk of fire!
- Do not place heavily worn laundry items in the dryer. Risk of fire!
- Do not place laundry items with loose fillings (e.g. cushions) in the dryer. Risk of fire!
- Parts with rigid components (e.g. door mats) may cover the air slots. Risk of fire! Do not place such items in the dryer.
- Do not overfill the dryer. Risk of fire! Observe max. loading volume of 6 kg.
- Ensure that explosive objects (e.g. cigarette lighters, spray cans, etc.) do not enter the dryer with the laundry. Risk of fire and/or explosion!
- Clean the micro-fine filter and fine strainer after each drying cycle.
- Never operate the dryer without fluff filters or with damaged or blocked fluff filters. Risk of fire!
- Clean the heat exchanger regularly.
- With stacked washer and dryer: Do not place objects on the dryer. These may fall off during operation.

- The covering bonnet of the bulb for the drum light must be screwed down tightly.

Child safety

- Keep packaging away from children. Risk of suffocation!
- Children can often not see the dangers associated with electric machines. Never leave unsupervised children near the dryer.
- Ensure that children and small animals cannot climb into the dryer's drum. Risk of death! Keep the dryer door shut whenever it is not being used.

General safety

- Only specialists may undertake repairs on the dryer.
- Never start up the dryer if the mains cable is damaged or if the operating screen, operating plate or base area are damaged so that the inside of the machine is open and accessible.
- Switch off the dryer before all cleaning, care or maintenance work. Also disconnect the mains plug from the socket or – with permanent connections – switch off the LS switch in the fuse box and/or fully unscrew the screwed-in fuse.
- Disconnect the machine from the power supply during long pauses in operations.
- When removing from the socket, never pull the mains plug by the cable, instead take a hold of the plug.
- Manifold plugs, couplings and extension cables must not be used. Risk of fire from overheating!
- Do not spray down the dryer with jets of water. Risk of electric shock!
- Do not lean on the open door. The machine may tip over.
- Once the drying cycle has been interrupted, the laundry and drum may be hot. Risk of burns! Take care when removing the laundry.

Disposal

Packaging material
The packaging materials are environmentally friendly and can be recycled. The plastic components are identified by markings, e.g. >PE<, >PS<, etc. Please dispose of the packaging materials in the appropriate container at the community waste disposal facilities.

Old appliance

The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

Warning! Remove mains plug from socket when you have no further use for the machine. Cut off mains cable and dispose of together with plug.
Destroy loading door lock. Children cannot then lock themselves in the machine and put their lives at risk.

Environmental tips

- In the dryer, laundry becomes fluffy and soft. Fabric softeners are not therefore needed when washing.
- Your dryer will function most economically if you:
  – always keep the ventilation slots on the base of the dryer unobstructed;
  – use the loading volumes specified in the programme overview;
  – ensure you have good ventilation in the installation room;
  – clean the micro-fine filter and fine strainer after each drying cycle;
  – spin the laundry well before drying. Example: Consumption data – depending on spinning speed – for 6kg of laundry, dried using the ⊙ COTTONS ☀ STORAGE DRY programme.

Pre-draining			Drying cycle	
Revolutions per minute	Residual dampness		Energy in kWh	Costs in euros[1)]
	in litres	as a %		
800	4.2	70	3,84	0,58
1200	3.2	53	3,10	0,47
1400	3.0	50	3,00	0,45
1800	2.5	42	2,60	0,39

1) Tariff: 0.15 Euro/kWh

Description of machine

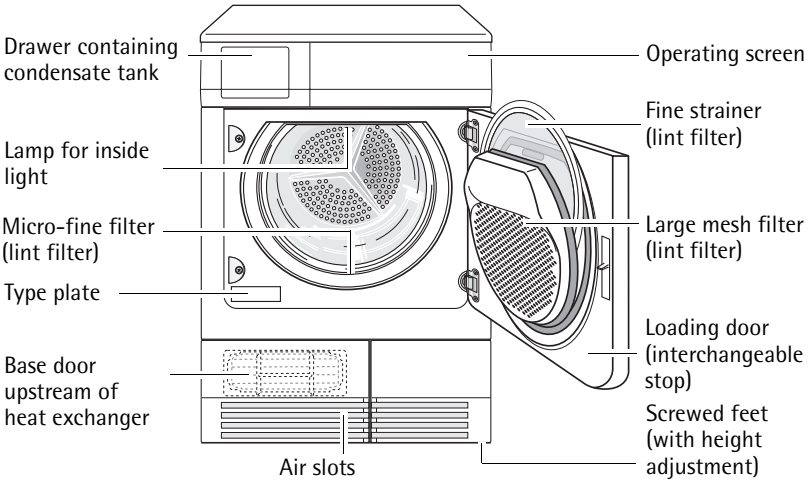

Control panel

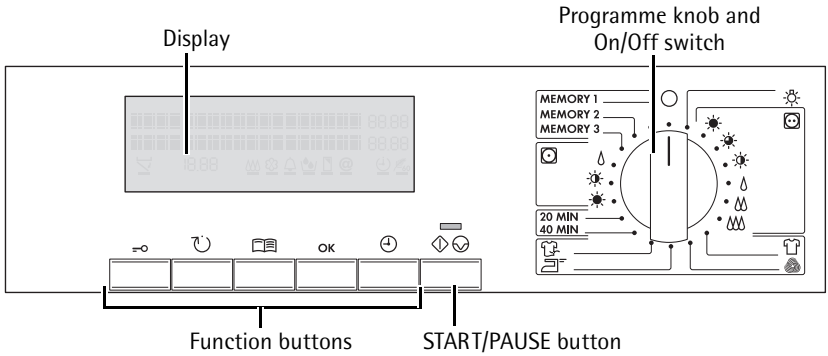

What is shown in the display

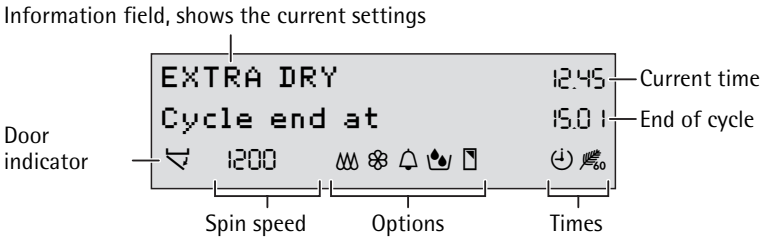

Prior to using for the first time

Switching on the appliance for the first time - setting the language

The display is set to English as standard in the factory.

Important! If the display does not show the menu for setting the language when the appliance is switched on, the appliance has been switched on before. If this happens, please see the section "Setup/Language".

To switch on the appliance, turn the programme knob to any programme, e. g. COTTONS ☀ EXTRA DRY.

The display lights up and should look like the illustration opposite.
In addition the display shows:
– "To change push OPTION key"
– "To confirm push OK key"

If you want to keep the language:

Press the OK button.

If you want to change the language:

1. Press the OPTION button repeatedly, until the desired language appears in the display, e. g. SUOMI
2. Press the OK button.

The message SUOMI flashes repeatedly and the display should then look for example like the illustration opposite.

3. To switch the appliance off, turn the programme knob to ○ OFF.

If the wrong language is set by mistake, please look at the "Setup/Language" section.

Setting the time

So that the time and the end of the programme are correctly displayed, please check the time shown in the display and set the current time if necessary. To do this, please see the section "Setup/Clock".

Programme overview

Programme		max. load (weight when dry)	Additional functions				Application/properties	Care symbols
			❀ HALF POWER [1]	BUZZER	SENSITIVE [1]	DRY LEVEL		
COTTONS	☀ EXTRA DRY	6kg	•	•	•	•	Thorough drying of thick or multi-layered fabrics, e.g. terry towelling items, bathrobes.	
	☀ INTENSIVE DRY	6kg	•	•	•	•	Thorough drying of thick fabrics, e.g. terry towelling items, towels.	
	☀ STORAGE DRY	6kg	•	•	•	•	Thorough drying of fabrics of even thicknesses, e.g. terry towelling items, knitted items, towels.	
	DAMP	6kg	•	•	•	•	For thin fabrics which are also to be ironed, e.g. knitted items, cotton shirts.	
	HAND IRON	6kg	•	•	•	•	For normal thickness cotton or linen laundry, e.g. bedding, table linen.	
	MACHINE IRON	6kg	•	•	•	•	For cotton or linen laundry which is also to be machine-pressed, e.g. bedding, table linen.	
EASY CARES	☀ EXTRA DRY	3kg	•	•	•	•	Thorough drying of thick or multi-layered fabrics, e.g. pullovers, bedding, table linen.	[2]
	☀ STORAGE DRY	3kg	•	•	•	•	For thin fabrics which are not ironed, e.g. easy care shirts, table linen, baby clothes, socks, lingerie with bones or wires.	[2]
	DAMP	3kg	•	•	•	•	For thin fabrics which are also to be ironed, e.g. knitted items, cotton shirts.	[2]

1) ❀ HALF POWER and SENSITIVE cannot be selected together.
2) Select ❀ HALF POWER.

Programme	max. load (weight when dry)	Additional functions				Application/properties	Care symbols
		HALF POWER [1]	BUZZER	SENSITIVE [1]	DRY LEVEL		
LEISURE	6 kg	•	•	•	•	Special programme for leisure clothing, such as jeans, sweat-shirts, etc., of different material thicknesses (e.g. at the neck, cuffs and seams).	
WOOL CARE	1 kg	•	•	-	-	Special programme for briefly treating woollens with warm air, after they have been dried naturally, worn or stored for long periods. Wool fibres stand up and the wool becomes soft and cosy. Recommendation: Remove fabrics immediately after drying.	
EASY IRON	1 kg	•	•	-	-	Special programme with anti-crease mechanism for easy care fabrics such shirts and blouses; for minimum ironing effort. The result depends on the type of fabric and its finish. (The load corresponds to approx. 5 to 7 shirts.) Recommendation: Place fabrics in the dryer straight after spinning. Once dried, immediately remove fabrics and place on a clothes hanger.	[2]
REFRESH	1 kg	•	•	-	-	Special programme, lasting around 35 minutes, for refreshing or gently cleaning textiles with commercially available dry cleaning products. (Only use those products which are declared as suitable for the dryer by the manufacturer; please observe the manufacturer's instructions for use.)	
40 MIN 20 MIN	1 kg	•	•	-	-	For drying individual items of laundry or for small volumes of less than 1 kg.	[2]

1) HALF POWER and SENSITIVE cannot be selected together.
2) Select HALF POWER.

Before the first drying cycle

In order to remove any residues which may have been produced during production, wipe the dryer drum with a damp cloth or carry out a brief drying cycle (20 MIN) with damp cloths in the machine.

Sorting and preparing laundry

Sorting laundry

- Sort by fabric type:
  – Cotton/linen for programmes in COTTONS programme group.
  – Mixtures and synthetics for programmes in EASY CARES programme group.
- Sorting by care label. The care labels mean:

Basic drying in tumble dryer possible	Drying at normal temperature	Drying at reduced temperature (select HALF POWER!)	Drying in tumble dryer **not** possible

- Do not dry new, coloured textiles together with light-coloured laundry items. Textile colours may bleed.
- Do not dry tricot or knitted items with the EXTRA DRY programme. Items may become stuck!
- Do not dry wool in the dryer. May become entangled! After air-drying, wool may be dried with the WOOL CARE programme.

Preparing laundry

- To avoid laundry becoming tangled: Close zips, button up coverings and tie loose bands or ribbons (e.g. of aprons).
- Empty pockets. Remove metallic items (paperclips, safety pins etc).
- Turn items with double-layered fabrics inside out (e.g. with cotton-lined anoraks, the cotton layer should be outermost). These fabrics will then dry better.

Drying

Switching machine on / switching light on

Turn the programme selector to any programme or turn it to ☼ LIGHT. The machine has been switched on. When the loading door is opened, the drum is illuminated.

Opening loading door / filling laundry

1. Open loading door:
   – Either use force to push against the loading door (push point)
   – or if the machine is switched on: Press the ⊸ DOOR button.
2. Load your laundry (do not force it in).

⚠ **Caution!** Do not jam laundry in between the loading door and rubber seal.

3. Close loading door securely. Lock must audibly lock.

Selecting the programme

Use the programme selector to set the programme you require.
The estimated time of the end of the programme appears in the multi-display.

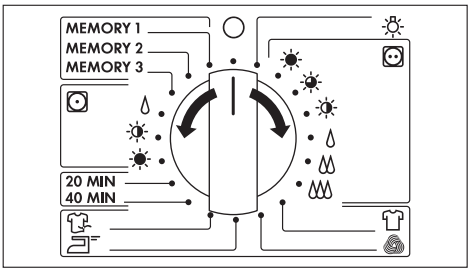

Setting the pre-drainage spin speed

If the washing in the washing machine was initially drained prior to the drying cycle, the dryer can be set according to the spin speed of the initial drainage procedure. The higher the spin speed was, the shorter the programme length for the drying cycle.

1. Press the ↻ RPM button a number of times until the desired spin speed of the initial drainage is displayed.

Setting options

Options can be added to a drying cycle that has already been selected.

Press the 🕮 OPTION button. The display shows the symbols for the options.

Dry Level

Fine adjustment of the washing's degree of dryness in three stages: Laundry becomes drier from 💧 to ⋘.

Half Power

For especially gentle drying of sensitive fabrics with the ⊙ care label and for temperature-sensitive textiles (e.g. acrylic, viscose). Programme is executed with reduced heat.
❀ HALF POWER is only suitable for use with loads of up to 3 kg.

Buzzer

When the drying cycle has finished, an intermittent acoustic audible signal will sound.

Sensitive

For gentle drying of fabrics that are frequently worn. Programme starts on full heat setting, which is then reduced as the programme progresses to be kind to the washing.

Setup

The special functions which can be set under Setup remain permanently stored in the appliance, e.g. time, language etc (see "Setup" section), until they are changed or switched off.

ⓘ Only the options that can be combined with the cycle that has already been set are shown in the display.

Half Power, Buzzer, Sensitive

1. Press the 🕮 OPTION button repeatedly until the required symbol flashes, e. g. ❀ HALF POWER (every time you press a button, the next symbol will flash – going from left to right).

2. Press the OK button. The symbol stops flashing. A black bar appears under the symbol. The option is set. The display changes to the next option.

To switch off the option, press the 🕮 OPTION button repeatedly until the symbol for the option flashes and then press the OK button. The black bar under the symbol disappears.

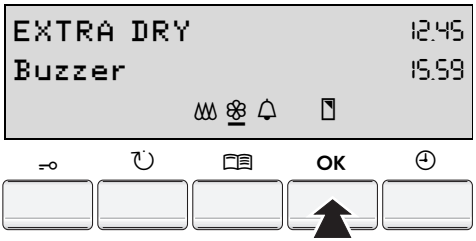

If other options are to be selected: Press the 🕮 OPTION button repeatedly until the desired symbol flashes and confirm each one with the OK button.

3. Press the 🕮 OPTION button repeatedly, until the initial display appears. The display shows the symbol for the selected option.

Dry Level

1. Press the 🕮 OPTION button repeatedly until the ⋔ DRY LEVEL symbol flashes.

2. Press the OK button.

3. Press the 🕮 OPTION button. The symbol 💧 INCREASED DRY appears with a black bar.

4. To change from 💧 INCREASED DRY to ⋔ VERY DRY, press the 🕮 OPTION button again.

Using the 🕮 OPTION button you can change between 💧 INCREASED DRY, ⋔ VERY DRY and ⋔ EXTRA DRY.

5. Press the OK button to confirm the selection. The display changes to the ❀ HALF POWER symbol, this means the HALF POWER option can now be set.

Delay Start Timer

1. Press the ⏲ TIME button repeatedly until the ⏲ DELAY START symbol flashes.
2. Press the OK button. In the display, "Start in 0 min" is displayed.
3. Press the ⏲ TIME button repeatedly until the display shows the desired start delay, e. g. "Start in 4 hours". A black bar appears under the ⏲ symbol.

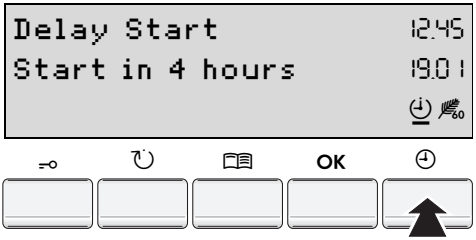

If 20 h is displayed and you press the button again, the delay start timer is cancelled.

4. Press the OK button. The display changes to the LONG ANTICREASE symbol - this means that by pressing the OK button a 60-minute anti-crease phase can be set.
5. Press the ⏲ TIME button, if the 60-minute anti-crease phase is not to be set. The display shows the ⏲ DELAY START symbol as well as the time remaining until the end of the programme (including the period by which the start has been delayed).

6. To activate the Delay Start Timer, press the ⏵⏷ START/PAUSE button. The display now shows, for example, "Start in 4.00" (=4 hours). The display for the time remaining until the start of the programme is reduced in 30 minute intervals (e.g. 4.00, 3.30, 3.00 and so on).

Until the start of the programme the drum is moved at longish intervals to loosen the laundry.

Long Anticrease

1. Press the ⏲ TIME button repeatedly until the LONG ANTICREASE symbol flashes.
2. Press the OK button. A 60 minute anti-crease phase is set. The display changes to the initial display. It now shows the LONG ANTICREASE symbol.

Starting the programme

1. Press the ⏻ START/PAUSE button.
   The programme is started or it starts after the time delay set has elapsed.

If after pressing the ⏻ START/PAUSE button the display shows "PLEASE CLOSE THE DOOR", the door has not been shut properly. Push the door closed firmly and press the ⏻ START/PAUSE button again.

Programme progress

The display indicates the stage of the programme that is currently being performed as well as the time of the end of the programme.

During the drying cycle the time of the end of the programme may change as the programme adjusts itself to different conditions (e.g. type and volume of laundry).

Changing a programme

To change a programme which has been selected by mistake once the programme has started, first turn the programme knob to ○ OFF and then reset the programme.

The programme can no longer be changed directly once the programme has started. If you nevertheless attempt to change the programme with the 🕮 OPTION button or the programme knob, the message SELECTION ERROR will flash in the display. The drying programme is not however affected by this (washing protection).

Putting in extra items or taking items out before end of programme

1. Open door.

Warning! Laundry and drum can become hot. Risk of burns!

2. Load or remove laundry items.
3. Close door securely.
4. Press the ⏻ START/PAUSE button to continue the drying cycle.

Drying cycle complete / removing washing

If the audible signal is set, at the end of the programme a 4x signal sounds and the display alternates between the messages "ANTICREASE", "PLEASE EMPTY THE TANK" and "PLEASE CLEAN THE FILTERS" .

The drying cycle is automatically followed by a anti-crease phase which lasts around 30 minutes. The drum rotates at intervals during this phase. This keeps the laundry loose and free of creases. The laundry can be removed at any time during the anti-crease phase. (The laundry should be taken out towards the end of the anti-crease phase at the latest to prevent creases from forming.)

1. Open door.
2. Before removing the laundry, remove fluff from the micro-fine filter. It is best to use a damp hand for this purpose (see "Cleaning and maintenance" section).
3. Remove laundry.
4. Turn the programme knob to ○ OFF.

   Important! After each drying cycle
   – clean the micro-fine filter and fine filter,
   – drain the condensed water container
   (see section "Cleaning and maintenance").
5. Close door.

Setup

The special functions that can be set under Setup remain permanently stored independent of each drying cycle – even after the appliance has been switched off or the mains plug has been removed from the socket.

Memory 1, 2, 3

Programme combinations can be stored at programme knob positions MEMORY 1, 2, 3 and can then be selected using the programme knob. To do this, the desired programme combination is first put together and then stored.

Setting the Memory

Example: Programme position MEMORY 1 is to be given the following programme combination: COTTONS ☀ EXTRA DRY with SENSITIVE option.

1. Turn the programme knob to COTTONS ☀ EXTRA DRY.
2. Using the OPTION button, set to SENSITIVE and press the OK button. A black bar appears under the symbol.
3. Press the OPTION button repeatedly until the SETUP symbol flashes.
4. Press the OK button. The display changes to the Special Functions level. Programme memory position MEMORY 1 is offered first.

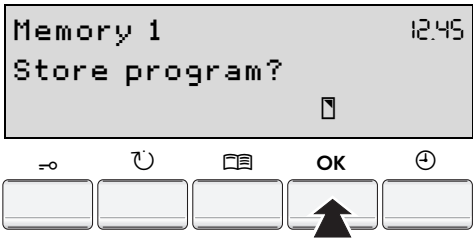

To change to another memory position, press the OPTION button.

5. Press the OK button.
   The programme combination is now stored to programme knob position MEMORY 1 and in the future can be selected directly using the programme knob.

The memory can be overwritten at any time with a new programme combination (see "Changing the Memory"), but cannot be deleted.

Changing the Memory

1. Put together the new programme combination as required (for an example, see "Setting the Memory", steps 1 and 2).
2. Press the OPTION button repeatedly until the SETUP symbol flashes.
3. Press the OK button.
4. Using the OPTION button, select the memory position to be changed, e. g MEMORY 1.
5. Store the new programme combination using the OK button.

Sound

The volume of the acoustic audible signal can be selected.

1. Turn the programme knob to any programme and press the 🕮 OPTION button repeatedly, until the ▯ SETUP symbol flashes.
2. Press the OK button.
3. Press the 🕮 OPTION button repeatedly, until SOUND is shown in the display.
4. Press the OK button.
5. Press the 🕮 OPTION button repeatedly until the desired volume (NORMAL, LOW, NO SOUND) is shown in the display.
6. Press the OK button to confirm the setting. The icon changes to the next special function.

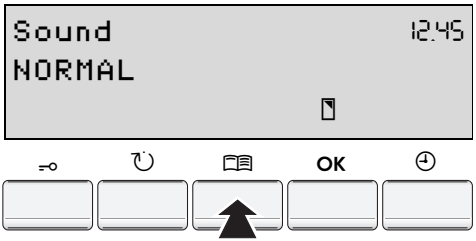

7. Press the 🕮 OPTION button repeatedly until the initial display is shown.

Water hardness

The dryer's degree of dryness detection can be set to the hardness of the washing water.

1. Turn the programme knob to any programme and press the 🕮 OPTION button repeatedly, until the ▯ SETUP symbol flashes.
2. Press the OK button.
3. Press the 🕮 OPTION button repeatedly, until WATER HARDNESS is shown in the display.
4. Press the OK button.
5. Press the 🕮 OPTION button repeatedly until the desired water hardness (NORMAL, SOFT, HARD) is shown in the display.
6. Press the OK button to confirm the setting. The icon changes to the next special function.

7. Press the 🕮 OPTION button repeatedly until the exit icon is displayed.

Language

1. Turn the programme knob to any programme and press the 🕮 OPTION button repeatedly, until the ▯ SETUP symbol flashes.
2. Press the OK button.
3. Press the 🕮 OPTION button repeatedly, until LANGUAGE is shown in the display.
4. Press the OK button.
5. Press the 🕮 OPTION button repeatedly, until the desired language appears in the display.

6. Press the OK button. The icon changes to the next special function.
7. Press the 🕮 OPTION button repeatedly, until the initial display appears.

Clock

1. Turn the programme knob to any programme and press the 🕮 OPTION button repeatedly, until the ▯ SETUP symbol flashes.
2. Press the OK button.
3. Press the 🕮 OPTION button repeatedly, until CLOCK is shown in the display.
4. Press the OK button.
5. Using the 🕮 OPTION button, set the desired time. With each press of the button, the display moves on by one minute. If the button is kept pressed, the display changes in 10 minute steps.
6. Press the OK button. The icon changes to the next special function.
7. Press the 🕮 OPTION button repeatedly, until the initial display appears.

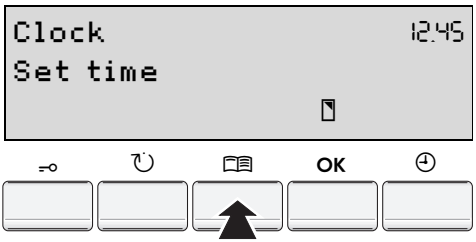

Contrast and Brightness

1. Turn the programme knob to any programme and press the 🕮 OPTION button repeatedly, until the ▯ SETUP symbol flashes.
2. Press the OK button.
3. Press the 🕮 OPTION button repeatedly until the display shows CONTRAST or BRIGHTNESS.
4. Press the OK button.
5. Using the 🕮 OPTION button, set the desired setting. With each press of the button or if the button is kept pressed down, the black triangle in the diagram moves further to the right for more contrast or more brightness. If the triangle reaches the right hand edge, it starts again from the left.

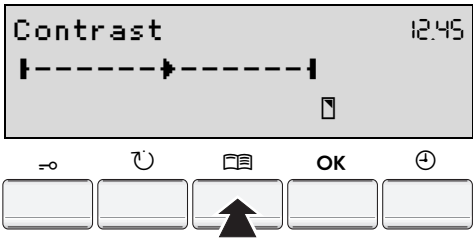

6. Press the OK button. The icon changes to the next special function.
7. Press the 🕮 OPTION button repeatedly, until the initial display appears.

Condensate tank indicator

The tank indicator at the end of the programme can be deactivated, for example, if an external condensed water drain is installed.

1. Turn the programme knob to any programme and press the 🕮 OPTION button repeatedly, until the ▯ SETUP symbol flashes.
2. Press the OK button.
3. Press the 🕮 OPTION button repeatedly, until TANK WARNING is shown in the display.
4. Press the OK button.
5. Press the 🕮 OPTION button to set to the desired setting (ENABLED, DISABLED).
6. Press the OK button to confirm the setting. The display changes to the initial display.

Cleaning and maintenance

Cleaning fluff filter

To ensure that the dryer works perfectly, the fluff filters (micro-fine filter and fine strainer) must be cleaned after every drying cycle.

⚠ **Caution!** Never operate the dryer without fluff filters or with damaged or blocked fluff filters.

1. Open loading door
2. Use a damp hand to clean the micro-fine filter, which is built into the lower part of the loading aperture.

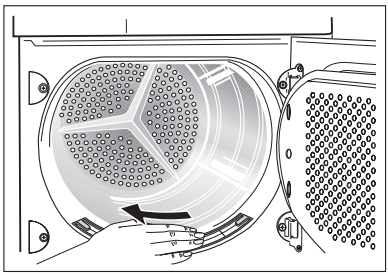

3. Push down unlock button on large mesh filter.
   Large mesh filter jumps up.

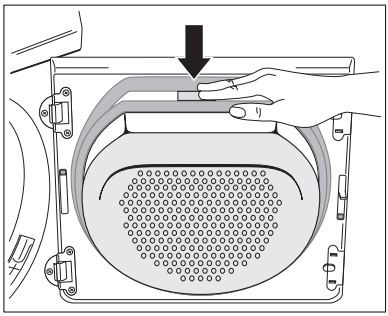

4. Take out fine strainer.
5. Remove fluff from fine strainer. It is best to use a damp hand for this purpose.

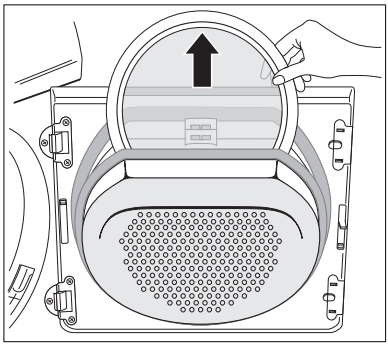

Clean the entire filter area

The strainer area does not have to be cleaned after every drying cycle, but should be checked regularly and cleaned of fluff if necessary.

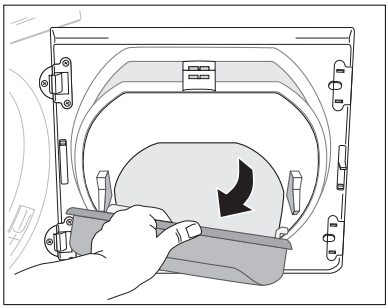

6. To do this, grip the top of the large mesh filter and pull it forwards until it comes loose from the two brackets.
7. Remove fluff from the entire filter area. It is best to use a vacuum cleaner for this purpose.
8. Press both journals of the large mesh filter into the brackets on the loading door until they snap into place.
9. Re-insert fine strainer.
10. Press against the large mesh filter until it locks into the interlock.

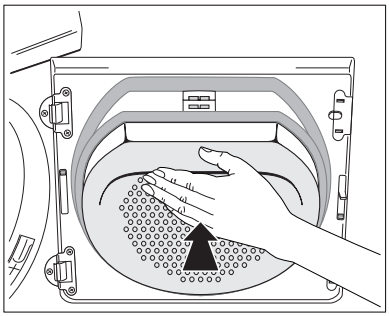

If the fine strainer is not fitted, the large mesh filter will not snap into place and the loading door cannot be closed.

Cleaning the door seal

Wipe the door seal with a damp cloth immediately after the drying cycle has finished.

Emptying the condensed water container

Empty condensed water container after every drying cycle.

When a programme is running and the condensed water container becomes full, the programme is automatically interrupted and the message THE TANK IS FULL, PLEASE EMPTY appears in the display. In order to continue the programme, the condensed water container must first be emptied.

Warning! The condensate is not suitable for drinking or for preparing foodstuffs.

1. Take out drawer containing condensed water container completely (1) and pull up the condensed water container's drainage pipe as far as it will go (2).

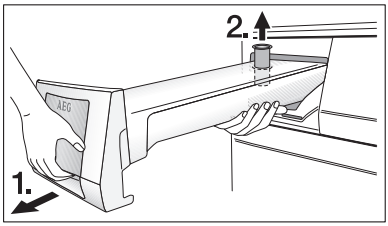

2. Pour condensed water out into a basin or similar receptacle.
3. Push drainage pipe in and refit condensed water container.

   If the programme has been interrupted as a result of the condensed water container being full:
   Press the ⏀ START/PAUSE button to continue the drying cycle.

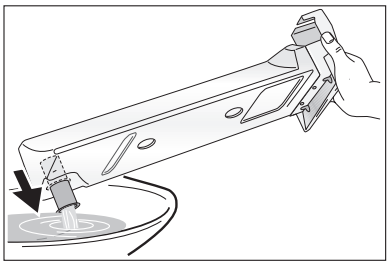

The condensed water container has a volume of approx. 4 litres. This is sufficient for around 6kg of laundry which has previously been spun at 800 revolutions/minute.

The condensed water be used as distilled water, e.g. for steam irons. However first filter the condensed water (e.g. with a coffee filter) to remove any residues and small pieces of fluff.

Cleaning the heat exchanger

If the display shows PLEASE CLEAN THE CONDENSER, the heat exchanger must be cleaned.

⚠ **Caution!** Operating when the heat exchanger is blocked with fluff can damage the dryer. This also increases energy consumption.

1. Open door.
2. Open door in plinth. To do this, press the release button on the bottom of the door aperture and open the door in the plinth to the left.

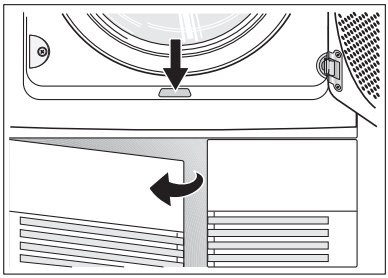

3. Clean fluff from the inside of the door and the heat exchanger front chamber. Wipe the door seal with a damp cloth.
4. Turn both lock washers inwards.

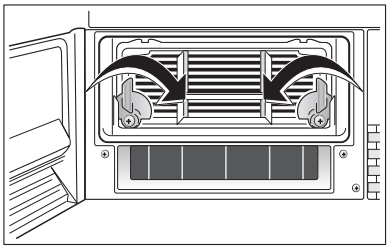

5. Use the handle to pull the heat exchanger out of the base and carry it horizontally to prevent any remaining water from spilling.
6. To empty the heat exchanger, hold vertically over a washing-up bowl.

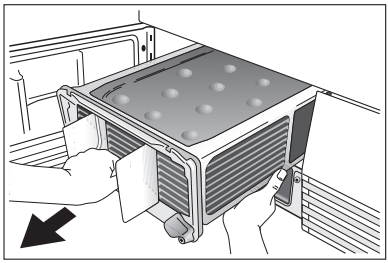

⚠ **Caution!** Do not use sharp objects to clean. The heat exchanger could develop leaks.

7. Clean heat exchanger.
   It is best to use a brush or to rinse thoroughly with a hand-held shower.
8. Replace heat exchanger and lock into place (turn both lock washers outwards until they snap into place).
9. Close door in plinth.

⚠ **Caution!** Never operate the dryer without the heat exchanger.

Cleaning the drum

Caution! Do not use abrasives or steel wool to clean the drum.

Lime in the water or cleaning agents may form a barely visible lining on the inside of the drum. The degree to which the laundry has been dried is then no longer detected reliably. The laundry is damper than expected when removed from the dryer.

Use a standard domestic cleaner (e.g. vinegar-based cleaner) to wipe down the inside of the drum and drum ribs.

Clean operating screen and housing

Caution! Do not use furniture cleaners or aggressive cleaning agents to clean the machine.

Use a damp cloth to wipe down the operating screen and housing.

What to do if...

Remedying small malfunctions

If while the appliance is operating a short acoustic audible signal sounds 3 times (if the acoustic audible signal is set) and one of the following messages appears in the display:
– PLEASE CHECK THE LOAD,
– PLEASE CLOSE THE DOOR,
please have a look at the following table.
When the fault has been remedied, press the ⏀ START/PAUSE button.
If "WarningError code: E and number or letter" is displayed: Switch the appliance off and on again. Reset programme. Press the ⏀ START/PAUSE button.
If the error appears again, please contact the Customer Care Department, stating the error code.

Problem	Possible cause	Remedy
Dryer is not working.	Mains plug is not plugged in or fuse is not working correctly.	Plug in at mains socket. Check fuse in fuse box (domestic installation).
	Door is open.	Close door.
	⏀ START/PAUSE button pressed?	Press the ⏀ START/PAUSE button again.
Drying results unsatisfactory.	Wrong programme selected.	Select a different programme the next time you dry (see section "Overview of programmes").
	Fluff filter blocked.	Clean fluff filter.
	Heat exchanger blocked with fluff.	Clean heat exchanger.
	Incorrect amount of washing.	Observe recommended loads.
	Ventilation slots in base area covered up.	Uncover ventilation slots in base area.
	Residue on inside surface of drum or drum paddles.	Clean inside surface of drum and drum paddles.
		Adjust using the DRY LEVEL option (see section "Drying, Setting options").
Display shows: PLEASE CLOSE THE DOOR.	Door not closed properly.	Close door - there should be an audible click. Restart the programme.
Door cannot be opened with the DOOR button.	Mains plug disconnected.	Plug in at mains socket.
	Programme knob in ○ OFF position.	Set programme. Door can be opened at any time by exerting pressure on the door.
Door cannot be closed.	Fine filter not in place and/or large mesh filter not inserted correctly.	Install fine filter and/or snap large mesh filter into place.
Display shows: SELECTION ERROR.	The selected function cannot be combined with other programme settings.	Select another function.
Drum light is not working.	Programme knob in ○ OFF position.	Turn programme knob to ☼ LIGHT or to any programme.
	Defective light bulb.	Replace light bulb (see next section).

Problem	Possible cause	Remedy
Programme stops midway, display shows: THE TANK IS FULL, PLEASE EMPTY.	Condensate tank is full.	Empty condensate tank, then start programme with the ⏻ START/PAUSE button.
Drying cycle ends shortly after programme starts. Display shows: PLEASE CHECK THE LOAD.	Not enough washing loaded or washing loaded is too dry for selected programme.	Select Timed Drying or higher degree of dryness (e.g. ☀ INTENSIVE DRY instead of ☀ STORAGE DRY).
Washing is heavily creased.	Possibly too much washing was loaded.	Observe recommended loads.

Changing bulb for inside light

Only use a special bulb which is designed specially for dryers. The special bulb is available from the after-sales service,
ET-Nr. 112 552 000-5.

⚠ **Warning!** Do not use standard bulbs! These develop too much heat and may damage the machine!

⚠ **Warning!** Before replacing the bulb, disconnect the mains plug; with a permanent connection: fully unscrew or deactivate the fuse.

1. Unscrew covering bonnet from above bulb (this can be found directly behind the loading aperture, at the top; refer to "Description of machine" section.)
2. Replace defective bulb.
3. Screw covering bonnet back down.

⚠ **Warning!** For reasons associated with safety, the covering bonnet must be screwed down tightly. If this is not done, the dryer must not be operated.

Technical data

CE This appliance conforms with the following EU Directives:
– 73/23/EEC dated 19.02.1973 Low Voltage Directive
– 89/336/EEC dated 03.05.1989 EMC Directive inclusive of Amending Directive 92/31/EEC
– 93/68/EEC dated 22.07.1993 CE Marking Directive

Height x width x depth	85 x 60 x 60 cm
Depth with loading door open	109 cm
Height can be adjusted by	1.5 cm
Weight when empty	approx. 42 kg
Loading volume (depends on programme) [1]	max. 6 kg
Energy consumption in accordance with IEC 1121 s. e. (6 kg of cotton, pre-drained at 800 rpm, COTTONS STORAGE DRY programme)	3,84 kWh
Scope	Domestic
permissible ambient temperature	+ 5°C to + 35°C

1) Different loading volume data may be needed in some countries as a result of different measuring methods.

Consumption values

The consumption values have been established under standard conditions. They may deviate when the machine is operated in domestic circumstances.

Programme	Loading volume in kg	Energy consumption in kWh
COTTONS STORAGE DRY [1]	6	3,84
COTTONS HAND IRON [1]	6	3,10
EASY CARES STORAGE DRY [2]	3	1,55

1) pre-drained at 800 rpm
2) pre-drained at 1000 rpm

⚠ Installation safety instructions

- Before first starting up, all parts of the transport safety equipment must be removed. The machine may otherwise be damaged.
- Before starting up for the first time, ensure that the nominal voltage and type of current specified on the machine type plate match the nominal voltage and type of current at the installation site. The electrical fuses required can also be found on the type plate.
- Always connect the plug into a protection contact socket which has been installed as specified.
- With permanent connections: A permanent connection may only be established by an authorised specialist electrician.
- Do not install machine in rooms at risk of frost.
- Ensure that the door of the machine cannot be blocked by interior doors of the house or the doors of other appliances.
- Do not install on carpets with high piles. Air circulation will be hindered at the ventilation slots.
- Ensure that the machine is not placed on its mains cable.
- Install the machine horizontally.

Removing transport safety equipment

⚠ **Caution!** Before first starting up, all parts of the transport safety equipment must be removed.

1. Open loading door
2. Pull off adhesive strips from inside machine on top of drum.

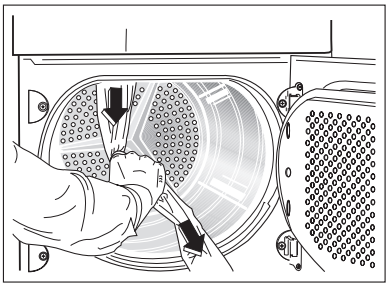

3. Remove foil hose and polystyrene padding from the machine.

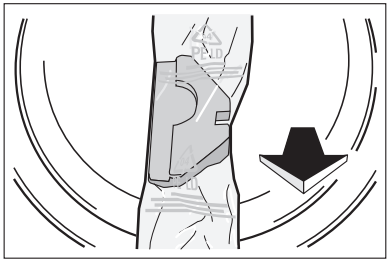

Electrical connection

Details on mains voltage, type of current and the fuses required should be taken from the type plate. The type plate is fitted near the loading aperture (see "Machine description" section).

Changing door stop

Warning! The door stop may only be changed by a specialist.
If necessary, please contact our after-sales service or your specialist dealer.
Warning! Before changing the door stop, disconnect the mains plug; with a permanent connection: fully unscrew or deactivate the fuse.

1. Open loading door.
2. Unscrew hinge A from the front of the machine and take off the loading door.
3. Remove cover plates B and C. To do this, insert a thin screwdriver into the slots as shown in the illustration, press downwards slightly and pry out the cover plates.
4. Use an appropriate tool and exert pressure to unfasten locking block D from the snap-on fixture, take out and reinsert on the other side having rotated the block through 180°.

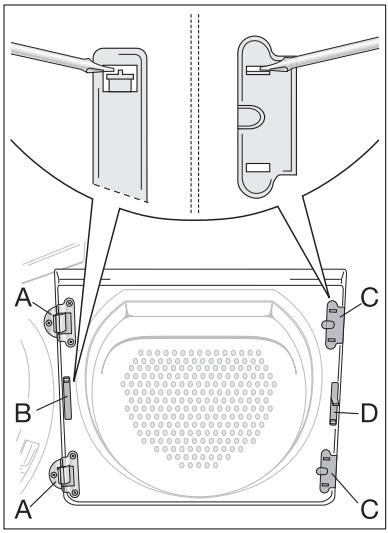

5. Unscrew hinge A from the loading door, rotate through 180°, reinsert on the opposite side and screw down.
6. Reinsert cover plates B and C on the opposite site having first rotated them through 180°.
7. Unscrew cover plates E from the front of the machine, rotate through 180°, screw on the opposite side.
8. Unscrew door lock F, push down slightly and remove from the front of the machine.
9. Disconnect cable connector from door lock F.
10. Press snap-in button G in and down, press cover down slightly and remove from front of the machine.
11. Disconnect cable connector from cover G.
12. Change door lock F over to the opposite side, insert the cable connector and screw down the door interlock.

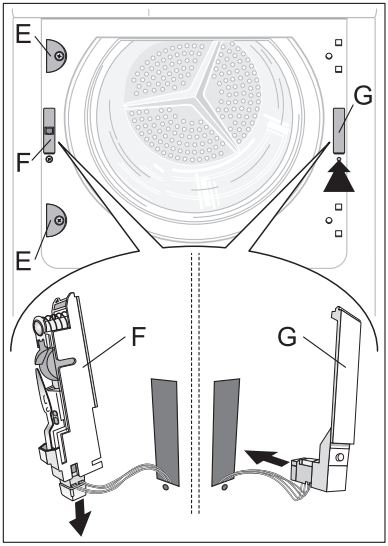

13. On the other side, insert the cable connector in cover G, insert cover and allow snap-in button to lock into place.
14. Insert loading door and hinges into recesses on the front of the machine and screw down.
15. Once the door stop has been replaced, check the function of the ⊸ DOOR button.

    Note regarding contact protection: The machine is only secure for operations again once all plastic parts have been inserted.

Special accessories

The following special accessories are available from your Service Force Centre or your specialist dealer:

Intermediate installation kits for stacked washer and dryer

These intermediate installation kits can be used to arrange the dryer and an AEG-Electrolux washing machine (60 cm wide, front loading) as a space-saving washer/dryer stack. The automatic washing machine is at the bottom and the dryer is at the top.
Two versions can be supplied:

– without stacker plate	916.018 902
– with extractable stacker plate	916.018 903

Installation kit for external condensed water drain

Installation kit (125 122 510) for direct draining of condensed water into a basin, spigot, drain, etc. The condensate tank then no longer has to be emptied; it must however remain in its position in the appliance. To switch off the TANK indicator, see the section "Setup, Condensate tank indicator"
Max. pumping height: 1 m from the surface on which the dryer is standing; max. pumping length: 3 m

Guarantee/Customer Service

Weitere Kundendienststellen im Ausland
In diesen Ländern gelten die Garantiebedingungen der örtlichen Partner. Diese können dort eingesehen werden.

Further after-sales service agencies overseas
In these countries our AEG-Electrolux agents' own guarantee conditions are applicable. Please obtain further details direct.

Autres agences étrangères assurant le service après-vente
Dans ces pays, les conditions de garantie des concessionnaires de la région sont valables. Vous pouvez les consulter sur place.

Otros puntos de Postventa en el extranjero
En estos países rigen las condiciones de nuestros representantes locales. las cuales pueden ser consultadas allí mismo.

Ulteriori uffici del servizio tecnico assistenza clienti all'estero
In questi paesi sono valide le condizioni di garanzia dei partner locali. Queste condizioni possono essere esaminante sul luogo.

Serviços de assistência técnica no estrangeiro
Nestes países são válidas as condições de garantia dos concessionários locais, podendo aí ser consultadas.

További vevöszolgálati irodák külföldön
Ezekben az országokban a mi AEG-Electrolux vevöszolgálatainknál saját jótállási feltételek alkalmazhatók. A további adatokat kérjük közvetlenül szerezzék be.

Servisne službe
Na garancijskem listu boste našli seznam pooblaščenih servisnih služb AEG-Electrolux.

U.A.E. Abu Dhabi Universal Trading Company P.O. Box 43 99 Tel.: 6335331 Service Center 6733974	**Jordan** Jordan Household Supply Co. Ltd. P.O. Box 3/68 Amman/Tel.: 69 70 50	**Malta** ITC International Trading Company White House Building Mountbatte Street Blata L-Bajda/Tel.: 220644
Egypt Middle East Commercial Center 4 Salah El Dein St. - 2nd floor Heliopolis, Kairo Egypt Tel.: 2024181719	**Canada** EURO-LINE Appliances 2150 Winston PARK Drive 20 Oakville, Ontario L6H 5V1 Tel.: 905 829 3980 Fax: 905 829 3985	**Mauritius** Happy World Centre Ltd. P.O. 7 54 1 Chausee Street Port Louis Tel.: 25355

Australia
The Andi-Co Group
1 Stamford Road
Oakleigh VIC 3166
Tel.: (03) 9569 1255
Fax: (03) 9569 1450
www.andico.com.au

Bahrain/Arabian Gulf
A.A. Zayani & Sons
P.O. Box 9 32
Bahrain
Tel.: 17311124

Bulgaria
Electrolux Bulgaria E.O.O.D.
91 Levski Blvd.
1000 Sofia
Tel.: 2 806676
Fax. 2 980 5276

Cyprus
Hadjikyrlakos & Sons Ltd.
Prodromou 121
P.O. Box 21587
Nicosia 1511
Service Telephones:
Nicosia 02 481226
Limassol 05 562182
Larnaca 04 633929
Paphos 06 932 699

Estonia
Electrolux Estonia Ltd.
Mustamäe tee 24
EE0006 Tallinn
Tel.: (372) 6 650 090
Fax: (372) 6 650 092

Hong Kong
Dah Chong Hong Ltd.
20 Kai Cheung Road
Kowloon Bay
Kowloon - Hong Kong
Tel.: 0085222621620
Fax: 0085227550333

Israel
Evis Ltd.
Tadiran-Ampa Service
10 Gibonay Israel Street
New Industrial Zone
Netanya, 42504
Israel

Korea (South)
Core Incorp.
3/F Chewoo Bldg.
200 Nonhyun-Dong
Kangnam-Ku 135-010
Seoul
Telefon 82 2 549 89 61

Croatia
Electrolux D.O.O.
Suplova 7
10000 Zagreb
Tel.: 1 61 19512
Fax: 1 61 19513

Kuwait/Arabian Gulf
Ali Al-Ghanim Est.
P.O. Box 21540 - Safat
Tel.: 4822190
Fax: 4820116

Lebanon
Adib & Assaferi
P.O. Box 539
Tripoli

Latvia
Electrolux Latvija Ltd.
Kr.Barona iela 130/2
Riga, LV-1012
Tel.: 371 7313626
Fax: 371 7845954

Lithuania
Electrolux Lithuania
Verkui 29
2600 Vilnus
Tel.: 372 272 3326
Fax: 372 272 3366

Malaysia
Arzbergh Engineering
No. 49A/B, Jalan Petaling
Utama 7
4600 Petaling Jaya
Tel.: 3 795 1084
Fax: 3 795 1082

Namibia
AEG NAMIBIA (PTY)
LIMITED-Jeppe Street
Northern Industrial Area
Windhoek
Tel.: (061) 21-6082/4
Fax: (061) 217838

New Zealand
Monaco Corporation Ltd.
10 Rothwell Avenue
Albany - Auckland
4399 Auckland 1
New Zealand
Tel.: 00 64-92 59 11 11
Fax: 00 64-92 59 11 12

Syria
WATTAR CO.
P.O. Box 36109
Mazzeh - Damascus
Direct Phone: 00963116132649
Fax: 00963116119537

Iran
ARIAN International Development Co.
AEG Showroom
Shariati, Balatar as Safar
Teheran / Iran
Phone No. Showroom:
021 / 285 513 / 4
Phone No. Service:
021 / 312 27 67 / 8

Poland
Electrolux Poland Sp. zo.o.
ul. Domaniewska 41
02-034 Warszawa
tel.: 022 874 33 33
fax: 022 874 33 00

Russia
Electrolux Russia Ltd.
16 Olympiysky prospekt
129090 Moscow
Tel.: (095) 937 7837
Fax: (095) 926 5513

Saudi Arabia
Awad Badi Nahas Est
Shara Siteen
Jeddah 21463
Phone: 6646583
Alia Trading Co
Mecca Road
Riyadh 11491
Phone 4645977

Japan Electrolux Japan Ltd. Domestic Appliances Department Maruzen Showa Warehouse Building Tookai 4-5-12, Ota-ku 143-006 Tokyo Tel.: 0120-13-7117 Fax: 03-3790-5257	**Singapore** Group Pte Ltd. 833 Bukit Timah Road Unit no. 01-11 Royalville 279887 Singapore Tel.: 0065 64638484 Fax: 0065 64638488	**Slovenia** Electrolux Slovenia D.O.O. Traska Ul. 132 1000 Ljubljana Tel.: 61 1234 137 Fax: 61 1234 238
Thailand Olympia Thai Tower, 444 Rachadapiser Road Samsennok- Huaykwang 10320 Bangkok Thailand Tel.: 006625136111 Fax: 006625136334	**Slovakia Rep.** Electrolux Slovakia S.R.O. Seberiniho 1 821 03 Bratislava Tel.: 02 4333 4322, 4355 Fax: 02 4333 6976	**South Africa** AEG (Pty) Ltd. 55, 12th Road P.O. Box 1 02 64 Kew/Johannesburg 2000 Tel.: 8069111
Hungary Electrolux Lehel KFT Erzsébet Királyné útja 87. 1142 Budapest Tel.: 00361/467-3200		

Service

In the event of technical faults, please first check whether you can remedy the problem yourself with the help of the operating instructions (section "What to do if...").

If you were not able to remedy the problem yourself, please contact the Customer Care Department or one of our service partners.

In order to be able to assist you quickly, we require the following information:

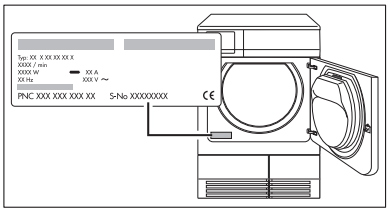

– Model description
– Product number (PNC)
– Serial number (S No.)
  (for numbers see rating plate)
– Type of fault
– Any error messages displayed by the appliance

So that you have the necessary reference numbers from your appliance at hand, we recommend that you write them in here:

Model description: .....

PNC: .....

S No: .....

***From the Electrolux Group**. The world's No.1 choice.*

The Electrolux Group is the world's largest producer of powered appliances for kitchen, cleaning and outdoor use. More than 55 million Electrolux Group products (such as refrigerators, cookers, washing machines, vacuum cleaners, chain saws and lawn mowers) are sold each year to a value of approx. USD 14 billion in more than 150 countries around the world.

AEG Hausgeräte GmbH
Postfach 1036
D-90327 Nürnberg

http://www.aeg-electrolux.de

© Copyright by AEG

822 944 828-01-220705-01

Subject to change without notice